



## ***Installation manual***



## ***Benz W211 Android***

*Are you ready to install our unit?*

*Let's go >>>*

# 5 steps to install

**STEP 01** Double check the plug of the factory radio.

**STEP 02** Check  
1) Do the screen is broken ?  
2) Do the accessories have missing ?

**STEP 03** Test your unit before installing into your car  
(Connect the power cable to your car)

**STEP 04** Do the full installation.

**STEP 05** Test the head unit functions.

**STEP 01** Double check the plug of the factory radio.

Our power cable doesn't support the W211 models with **Optic fiber amplifier or Harmon Kardon system or Bose sound system** . If your car built in the mentioned sound system, you need to seperately purchase below parts for the installation. Otherwise, your car may not output the sound.

**Decoder box**





**5m extended cable**



**Base on your car models and year, select the ASIN of below decoder box to purchase.**

MOST25-01	Benz ML (2005-2011)
	Benz GL (2005-2013)
	Benz R (2005-2018)
	Benz CLS (2009-2012)
	Benz S W221 (2005-2012)
	Benz SLK (2009-2012)
	BMW E9X E7X F0X
	AUDI 2G HOST
	AUDI 3G HOST
	AUDI 3G HOST
	Porsche Cayenne (2004-2016)
	Porsche 911 (2004-2015)
	Volkswagen Touareg (2011-2017)
	Porsche Boxster (2004-2005)
	MOST25-02
Benz E (2003-2008)	
Benz S (2004-2006)	
Benz SLK (2005-2008)	
Benz CL (2004-2006)	
D2B	Benz S/CL (2000-2003)
	Benz E (2000-2002)
	Benz SL (2003-2004)
	Benz C/CLK (2001-2004)
	Benz ML (2000-2005)

**If your factory power cable looks like the below photos and your car is also built in this amplifier in the trunk area, you will use another extended cable for the bypass connection.**

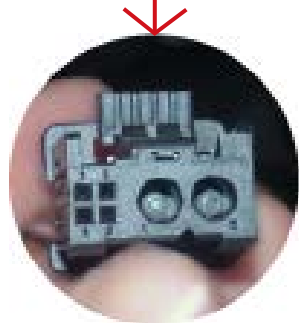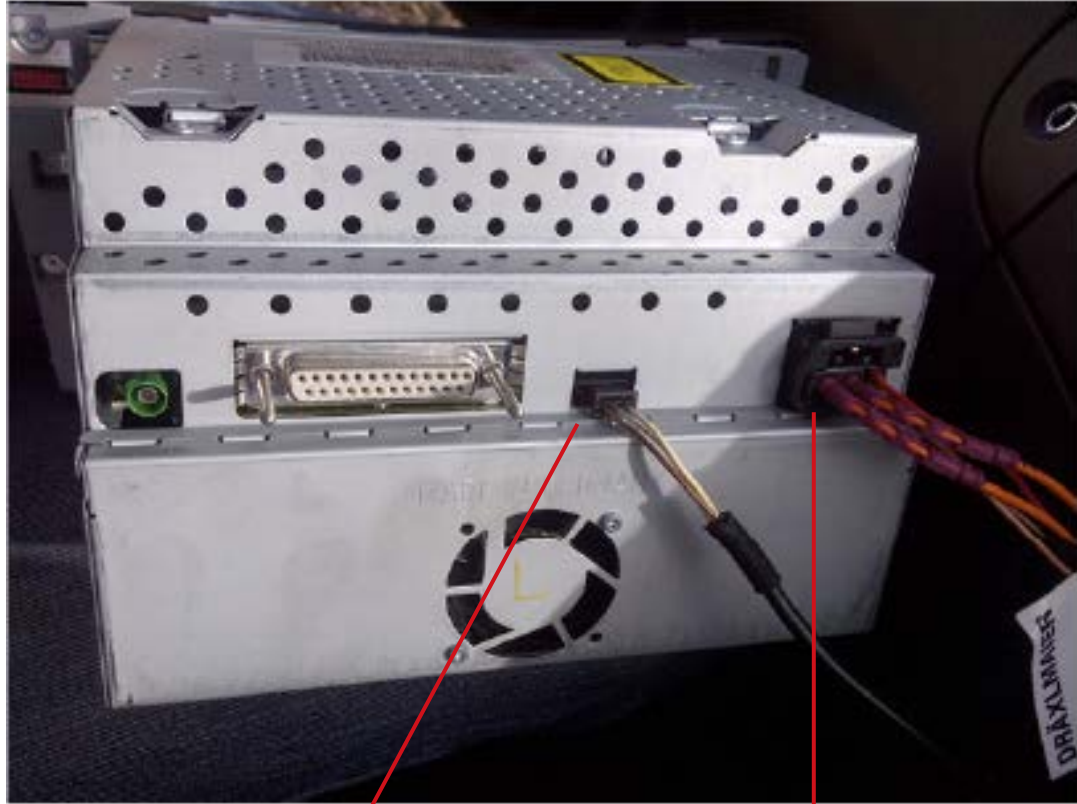

**Amplifier in the trunk area like below**



**Then you need to use the 5m extended cable to connect them.**



# STEP 03 Test your unit before installing into your car (Connect the power cable to your car)

1. Double check the size and shape of the center console panel.



2. Well prepare below tools.



Small flashlight



Phillips screwdriver



Insert changeable flat ratchet screwdriver

3. First of all, take out and remove backward the golf boot cover



3. Then open the cigarette console



4. Then be carefully to pull out the cigarette console and unplug the cable connected at the back.



5. After that, unscrew the bolts at the left and right side of center concole.



6. Prepare to pull out the center console, before that please double check if has any cable connected to the console.



7. Finishing the checking, you can slowly pull out the whole center console.



8. This step is to remove the old head unit, first use insert changeable flat ratchet screwdriver to unscrew the bolts under the unit.



9. Then slowly pull out the old head unit and then unplug the cable behind the unit.



Now you can take out the power cable to connect the head unit and then try to turn it on. If this part is no problem, you can do the remain steps.


## STEP 04 Do the full installation.

10. Connect those wires provided in the package like (1) Power cable with canbus, (2) USB cable, (3) Radio antenna adapter cable, (4) GPS antenna, (5) Wi-fi antenna and (6) External microphone as shown.

11. Set the canbus number following to the label.



12. Place the GPS antenna and microphone as shown. The wires are hidden in the side of pillar trim and led to the head unit.

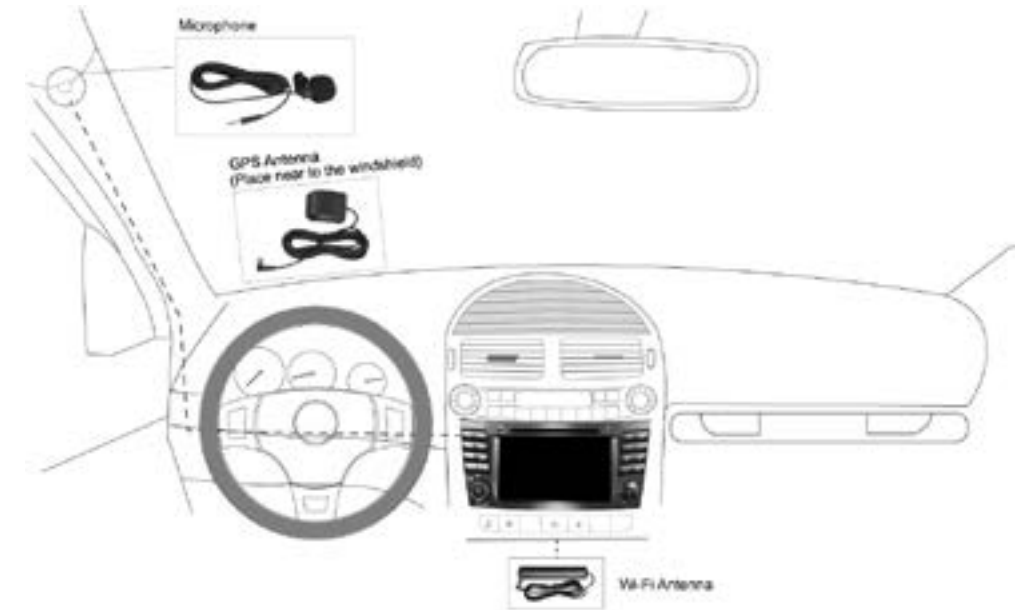

## STEP 05 Test the head unit functions.

(FM, SD, USB, Bluetooth, reversing, handbrake, headlight, steering wheel control and etc)

